


CHARGERY BMS16 connection diagram for 16S LiPo/LiFe battery pack

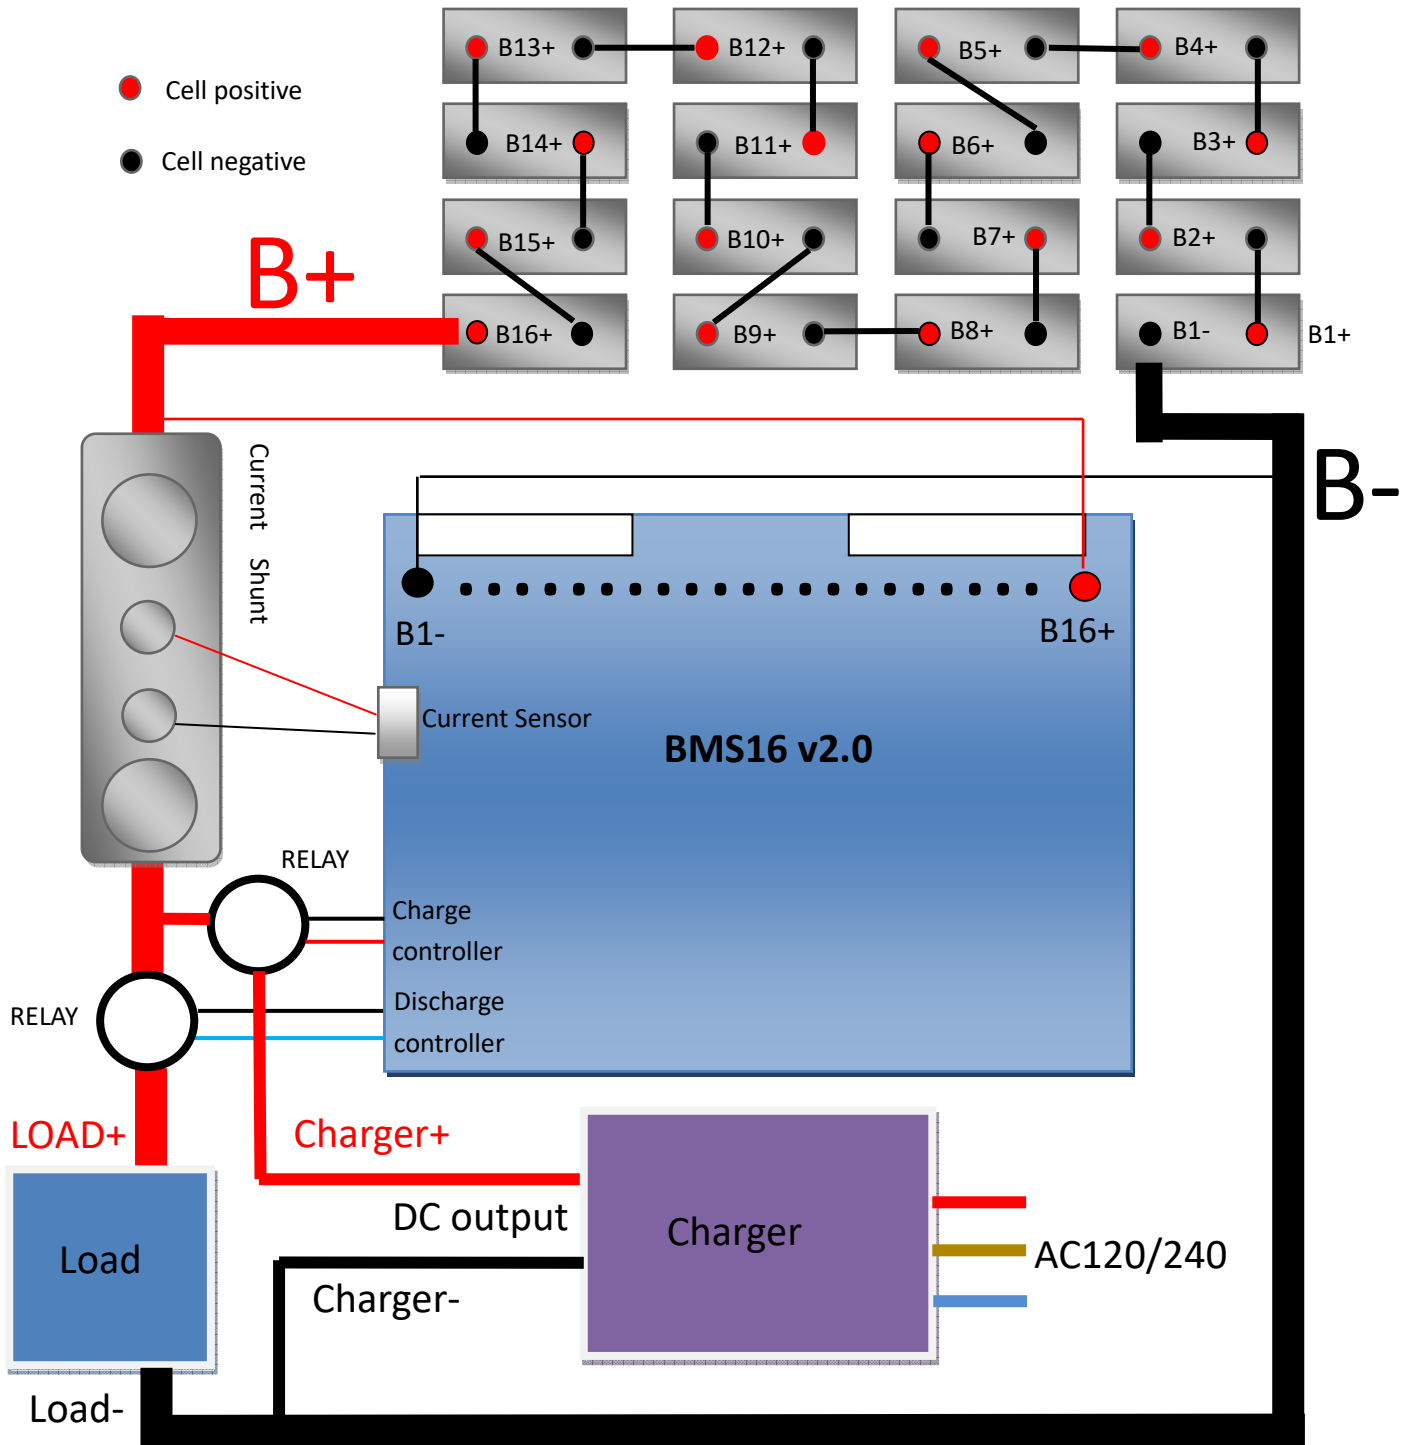

Heavy RED wires are positive of battery pack (B+/B16+), charger and load such as motor, and heavy black wire is negative of battery pack(B-/B1-), charger and load.

Warning

Before connect the relay to charge or discharge controller, please confirm the coil of relay voltage. The BMS16 controller will output 12V to power the coil, and total current for charge and discharge relay don't be larger than 2.5A.