

Chargery BMS update instructions

1. Install USB driver on your computer, run the program
X:\ChargeryupdateTool\ChargeryUSBdriver.exe (where X is hard drive letter)

Supports the following Windows OSes:

- Windows 2000 SP4
 - Windows XP SP2 and above (32 & 64 bit)
 - Windows Server 2003 (32 & 64 bit)
 - Windows Server 2008 / 2008 R2 (32 & 64 bit)
 - Windows Vista (32 & 64 bit)
 - Windows 7 (32 & 64 bit)
2. In the same directory, double click to run the update tool and enter program interface.
 3. Connect Chargery BMS24 to the PC by the USB data cable. When the port number (such as com5) appears, this shows the update tool identified the BMS. Click OPEN button lock the port please.
 4. Click Open file button open the firmware file. such as bms24_app_v1.06.hex
 5. Click the Update button, then the update progress bar will appear, update complete will be displayed on PC. BMS also display the progress bar simultaneously and enter into cell count setup interface after update automatically.

